



WiFi Desktop/Laptop Connection Instructions




Computer WiFi Connection

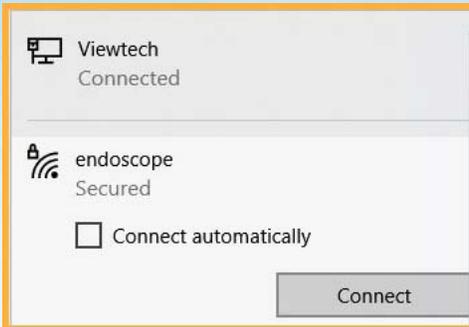

VLC Media Stream Selection

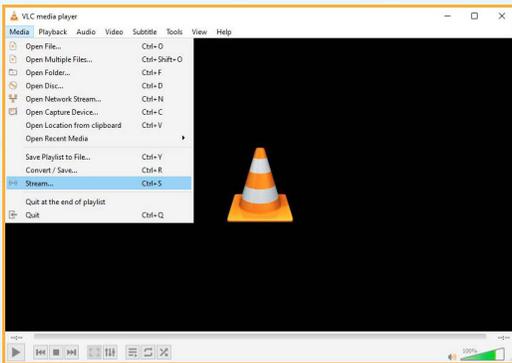

VLC Media Network Settings

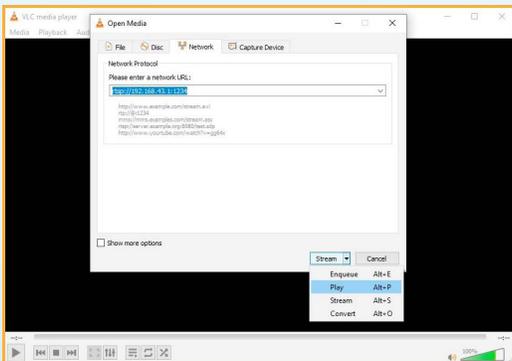

1. Download the VLC Media Player on the computer or laptop



2. Turn on the VJ-4, navigate to the System Settings Menu and select "On" under the WiFi Setting



2. On the computer or laptop WiFi setting, select "endoscope" as the WiFi connection

3. Open the VLC Media Player, select the "Media" drop-down and then "Stream"

4. Select the "Network" tab and enter the network URL `rtsp://192.168.43.1:1234`

5. Change the "Stream" drop-down to "Play" and the live inspection feed will be displayed on the desktop or laptop

Inspection Streaming Feed

